

The image features a dark blue background with a subtle hexagonal pattern. A prominent, glowing gold line starts from the top left, curves downwards, and then extends horizontally to the right, framing the logo. The logo itself is the word "makfa" in a bold, lowercase, sans-serif font, colored in a bright gold. The overall design is modern and professional.

**makfa**

## Misafir Self-Servis Modu

### ■ Power supply

3 standard AA alkaline batteries.

### ■ Battery life

About one year in normal state.

### ■ Function card

- Mother Card
- Master Card
- Temporary Guest Card

## 1. Definition

### ■ Mother Card

Mother card is set by the cabinet lock. It's used to create or terminate the waiter card and guest card.

### ■ Master Card

Master card is created by mother card, does as a key card to unlock the lock.

### ■ Temporary Guest Card

Create the temporary guest card when the lock is in the unlock state.

## 2. Reset

This cabinet lock default in guest self-help mode, the option switch is in the right side(next to the reset button).

### ■ Sıfırlama İşlemi:

Please follow the operation to reset: Turn off power, keep pressing the reset button. Turn on the power, buzzer of the lock sounds "beep...beep...beep..." for short. Release the reset button when you hear the "beep" for 5 times, then the lock is reset.

### ■ Tips: pls must release the reset button when you hear the "beep" for 5 times. Otherwise, the cabinet lock will enter other working mode.

### ■ Explanation

Remove the option switch to the left side (far way the reset button), then reset the lock. 1pcs guest key card can lock and unlock 2 cabinet locks at the same time. Otherwise, 1 pcs guest key card can lock and unlock only 1 cabinet locks.

### 3. Create Mother Card (This operation is necessary)

Connect the power line to the IC, press the "Reset Button" at the back, after a "beep", touch the RF Card which you want to become Mother Card lightly to the hole of lock, after a long "beep" and a short "beep", the RF card is recognized as Mother Card by the lock. Each lock can have one Mother Card at the most; the last one replaces the prior one.

■ **Operation :**

Press Reset Button + New Mother Card (1 time)

■ **Note: One lock can be set only 1 mother card and this operation is necessary.**

### 4. Create Master Card

Touch the Mother Card lightly to the lock, after a "beep" and the LED flashes in blue, the lock is unlocked, touch the Mother Card lightly to the lock again, buzzer "beep" for a long sound and blue light flashing, touch the RF card which you want to become master card, create master card successfully with a short "beep". You can continue to touch the other RF Cards before the LED stops flashing. After 6 seconds you touch the last card, the LED stops flashing and finish creating master cards.

■ **Operation :**

Mother Card (2 times) + New Master Card (1 time)

■ **Note:**

Each lock can create 15 master cards at the most. When you creating master card, buzzer sound 4 times "beep" for short means the number of master card is full already.

### 5. Create Temporary Guest Card

Touch one RF card which you want to become a temporary guest card when the lock is in unlock state. The lock will be locked and finish creating temporary guest card.

■ **Operation:**

New Temporary Guest Card(1 time when the lock is unlocked)

## 6. Terminate one Master Card

The operation of terminating one master card is same as creating a master card. Touch the Mother Card lightly to the lock, after a 'beep' and the LED flashes in blue, the lock is unlocked, touch the Mother Card lightly to the lock again, buzzer "beep" for a long sound and blue light flashing, touch the master card which you want to terminate, terminate master card successfully with two short "beep". You can continue to touch the other master cards before the LED stops flashing. After 6 seconds you touch the last card, the LED stops flashing and finish terminating master cards.

### ■ Operation:

Mother Card (2 times) + Master Card (1 time)

## 7. Terminate all Master Cards

Touch the Mother Card lightly to the lock for 3 times successively, all the master cards will be terminated.

### ■ Operation:

Mother Card (3 times)

## 8. Terminate Temporary Guest Card

Touch a RF card when the lock is unlocked by master card or temporary guest card, the RF card will be created as a new temporary guest card and the temporary guest card before will be terminated. (New temporary guest card terminate the old temporary guest card)

### ■ Operation:

New Card (1 time when the lock is unlocked)

## 9. Open

### ■ Open by mother card

Touch the Mother Card lightly to the lock, after a “beep” and the LED flashes in blue, then the lock unlock. The lock locked automatically.

### ■ Operation:

Mother Card (1 time)

### ■ Open by master card

Touch the Master Card lightly to the lock, after a “beep” and the LED flashes in blue, then the lock unlock. The lock unlocked always.

### ■ Operation:

Master Card (1 time)

### ■ Tips: If the lock is locked by temporary guest card, It will alarm with red flash of LED when you use master card to unlock it. Just touch the master card one more time, the lock will be unlocked.

### ■ Open by temporary guest card

Touch the temporary guest Card lightly to the lock, after a “beep” and the LED flashes in blue, then the lock unlock. The lock unlocked always.

### ■ Operation:

Temporary guest Card (1 time)

## 10. Close

### ■ Close by master card

Touch the Master Card lightly to the lock, after a “beep” and the LED flashes in blue, then the lock is locked.

### ■ Operation:

Master Card (1 time)

### ■ Close by temporary guest card.

Touch the temporary guest Card lightly to the lock, after a “beep” and the LED flashes in blue, then the lock is locked.

### ■ Operation:

Temporary guest Card (1 time)

## 11. Low voltage warning

- If the batteries' voltage is low, touch RF Card, two long "beep" from the buzzer, LED flash red for two times, then the lock is unlocked. Please change 3 pieces of new AA batteries as soon as possible.

## 12. Anti-theft Alarm Function

- When the cabinet door is close, once the lock latch is picked illegally, buzzer will sound "beep" for 15 seconds continuously. Touch a valid key card can stop alarming.
- **Note:** Make sure the key card can unlock the lock normally before you close the door.

